


EVV-2 Cardboard Edge Protector Cutter

Instructions manual

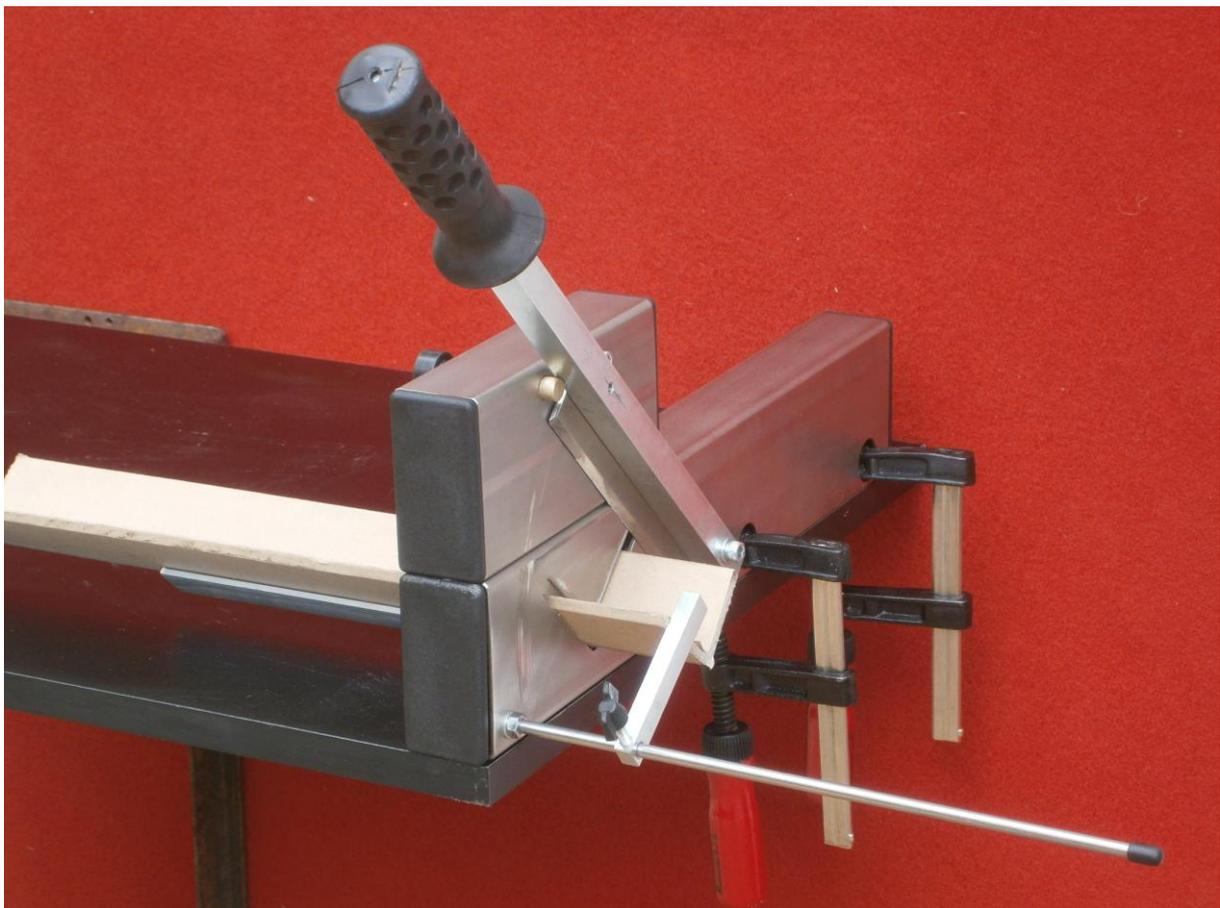

Application of the EVV-2 Cardboard Edge Protector Cutter

The EVV-2 Cardboard Edge Protector Cutter is designed to cut cardboard edge protector profiles up to 50x50x2mm to the desired length.

Warning


- The EVV-2 Cardboard Edge Protector Cutter is designed to cut cardboard edge protector profiles with the specified parameters.
- Cutting other materials or bigger edge protector profile can hurt the EVV-2 and can cause injury.
- Prior to the EVV-2 Cardboard Edge Protector Cutter utilization, definitely read all instructions.
- To reduce the risk of injury, an inspection shall be essential, if the EVV-2 Cardboard Edge Protector Cutter utilized in the vicinity of children.
- There is a sharp blade in the EVV-2 Cardboard Edge Protector Cutter which can cause injury. Do not touch the edge of the blade and be very careful if you should disassemble the device.
- Make sure that the table on which you the EVV-2 mount is strong enough. Double check the clamps if they are holding strong enough the device.

Parameters

Dimensions disassembled: (L x W x H)	620x80x160mm
Dimensions assembled: (L x W x H)	520x450x330mm
Weight:	4,2 kg
Max. edge protector cardboard size:	50x50mm
Max. cardboard thickness:	5mm

Accessories delivered with the EVV-2 Cardboard Edge Protector Cutter

With the EVV-2 Cardboard Edge Protector Cutter are the following parts delivered:

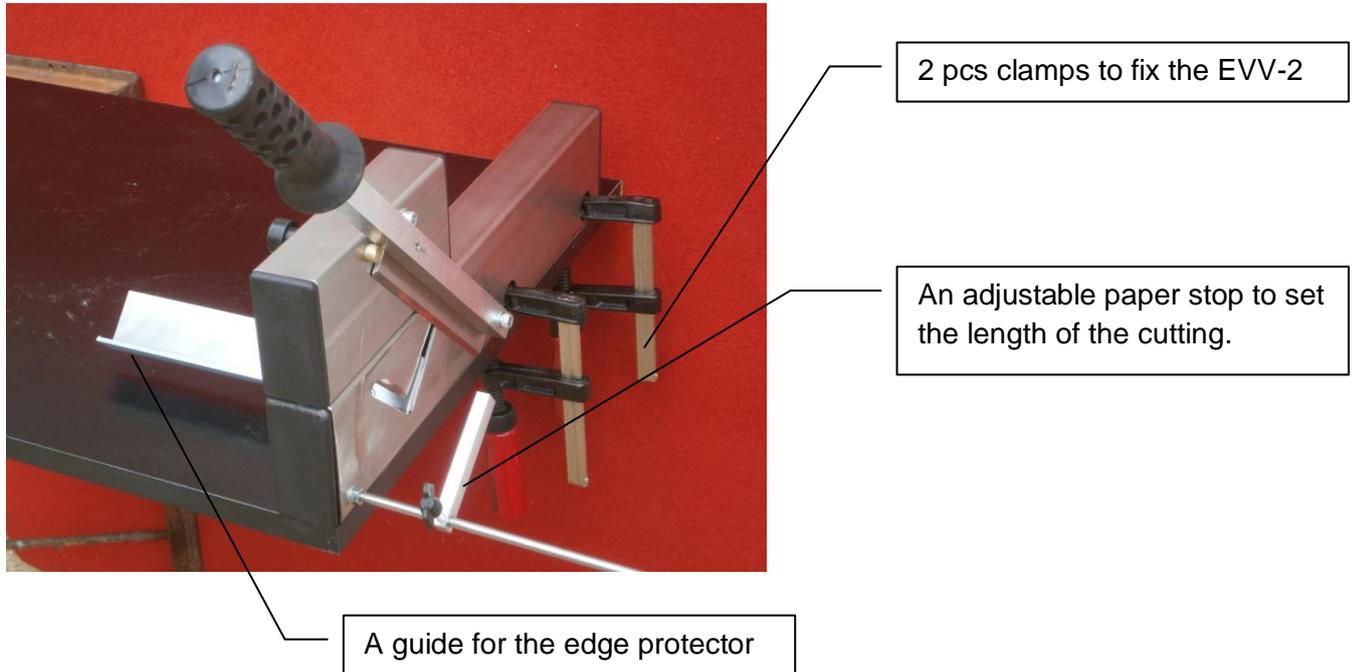

Assembling the EVV-2 Cardboard Edge Protector Cutter


To reduce the delivery costs the EVV-2 is delivered disassembled.



Insert the edge protector guide into the device as in the picture.




Fix it with two M4 screw. Adjust the guide before fixing the screws so that you can push the edge protector through the EVV-2 without hit the frame of the device.

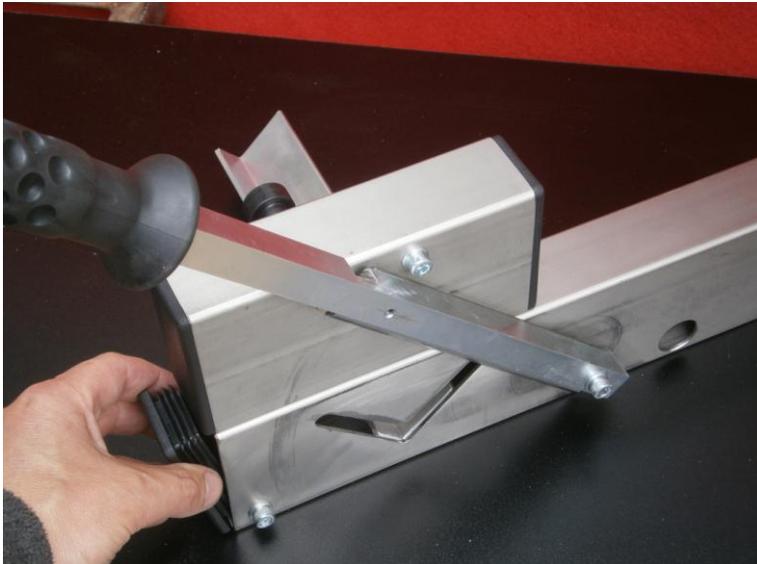

Remove the plastic end plug from the steel profile.




Remove the screw from the steel profile. (This screw is to secure the end position of the cutting knife. Do not remove this screw if you don't want to use the paper stop.)

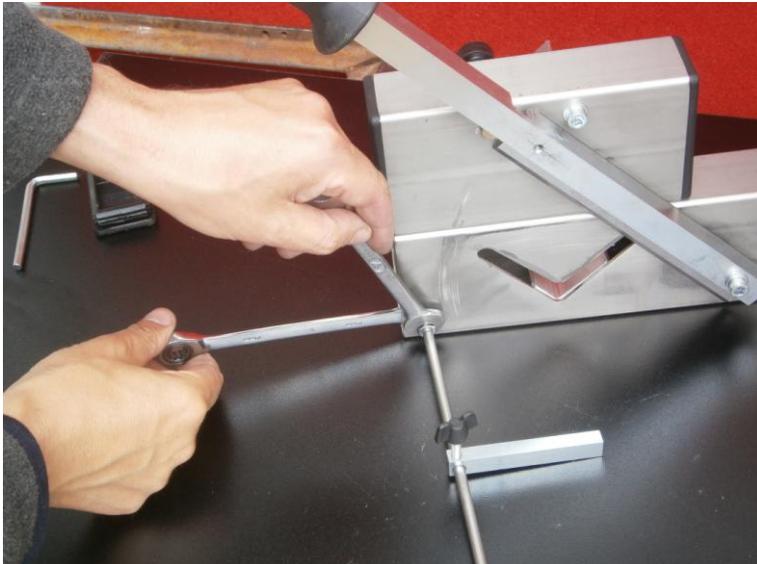

And mount the paper stop as in the picture. Press back the end plug and fix the EVV-2 edge protector cutter to a table with the two clamps which are delivered with the device.

Using the EVV-2 Cardboard Edge Protector Cutter

Insert the edge protector cardboard profile into the EVV-2. You can use the paper stop for determining the length you want to cut.

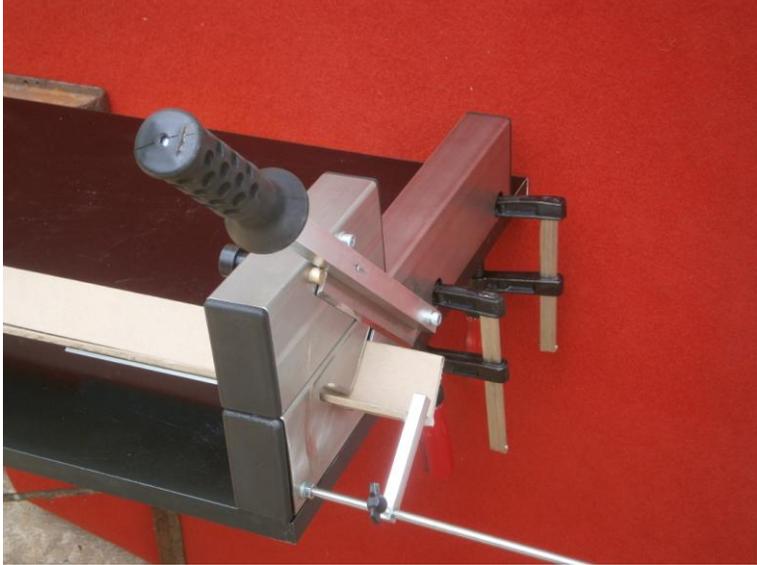

If you positioned the edge protector to the desired position, release the safety pin with pulling its knob.



Then press down the handle of the machine to cut the profile. Move the handle upwards so long as it'll be fixed again in this upper position.